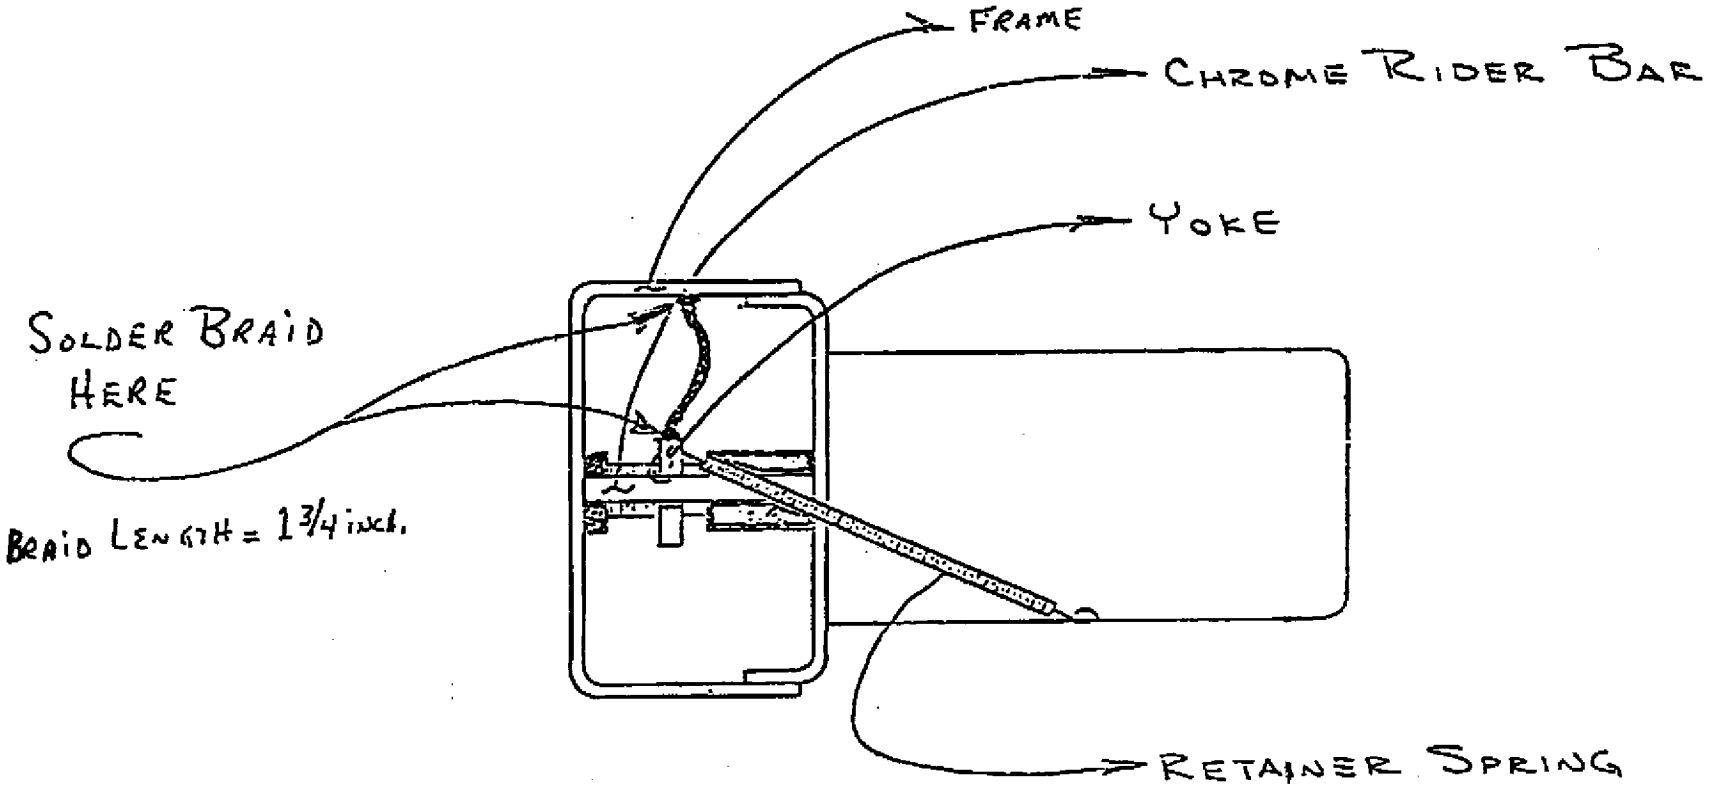



Clean Chrome Rider Bar with wood alcohol or similar solvent. Dry with soft cloth. DO NOT OIL. Leave entire Rider Bar absolutely clean and dry.

SOLDER BRAID TO V.F.O. FORK AS ILLUSTRATED. PLEASE BE CAREFUL NOT TO ALLOW SOLDER TO FLOW INTO THE BRAID. HOLD BRAID 1/8" FROM END WITH NEEDLE NOSE PLIERS. THE BRAID MUST BE FLEXABLE.